




DOOR MOUNTING ON V-GRIP SHELVING

12 SHELE VI

1906B

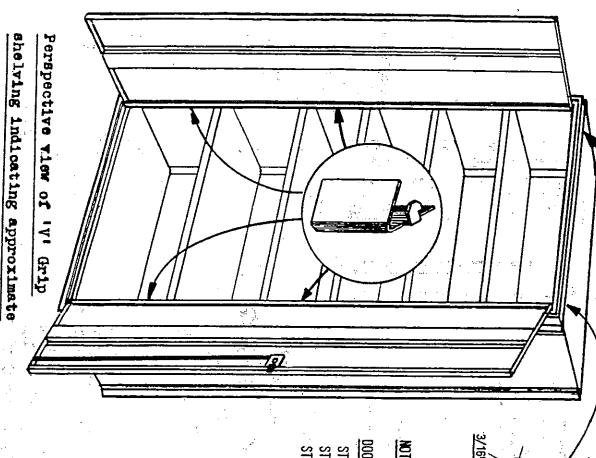

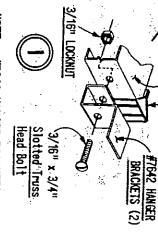

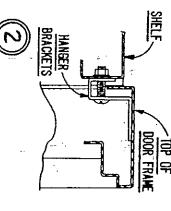


NOTE - #7642 HANGER BRACKETS ARE FURNISHED WITH 7'-0" DOORS ONLY.

DOOR ASSEMBLY ON V-GRIP SHELVING

STEP 1. IF REQUIRED, FASTEN HANGER BRACKETS TO SHELF AT 7'-O" HEIGHT. STEP 2. LIFT DOOR AND HANG ON BRACKETS AS SHOWN.

STEP 3. INSTALL #7612 BRACKETS WITH DART CLIPS AS SHOWN IN DETAIL 3.

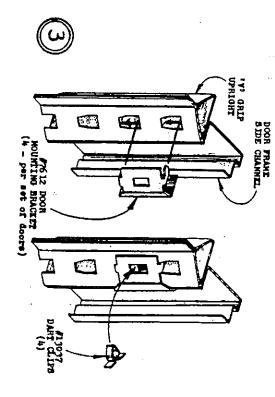

View from inside of shelving showing how

location for Door Hounting Brackets.

to install Mounting Brackets and Dart Clips.

