


Standard Quick-View

ASSEMBLY INSTRUCTIONS

1. PARTS

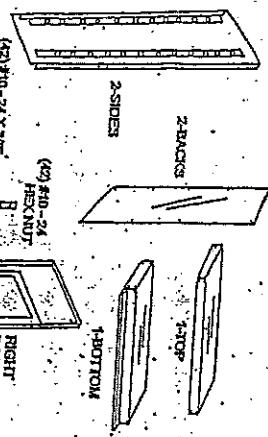

2. INSTALL BACKS

Using a flat clean surface, lay out the back panels.

Overlap 1 edge of the back panels so the holes align.

Insert security screws from the bottom side.

Install screws and hex nuts only in the middle of the back panel for now.

3. INSTALL BOTTOM

Attach the bottom panel with open side toward outside as shown below. Using security screws and hex nuts.

Insert only the middle screws for now.

4. INSTALL SIDES

Attach the sides panels to the back and bottom. The back must be inside between two sides. Use for each side nine security screws and hex nuts.

Insert security screws from the outside of the cabinet.

Do not place screws in the top holes for now.

5. INSTALL TOP

Attach the top panel to the sides and back panels.

Use 13 screws and hex nuts tighten all bolts.

Use hammer if the holes aren't aligned.

6. INSTALL DOORS

Place one nylon washer on door pin **A**.

Slide pin in hole on the bottom **B**. Pull upper pin down **C**.

See Handle Instructions


7. INSTALL SHELVES

Determine the shelf spacing desired.

Place the first shelf in the cabinet just above the tabs that the shelf will set on.

8. COMPLETE CABINET

When all of shelves have been installed the unit is complete.

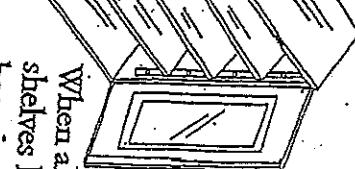

625 E 10TH AVE.
HALEAH FL 33010-4541
PHONE (305)499-4800